


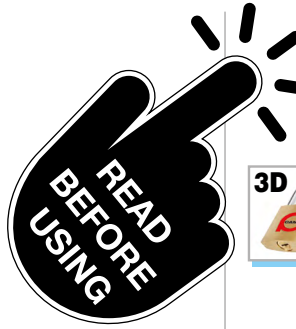





819 AS Z1 D1


DX
SX






FOR YOUR SAFETY WARNING

3D  **8mm**  **8mm**   **Fe**  www.camar.it

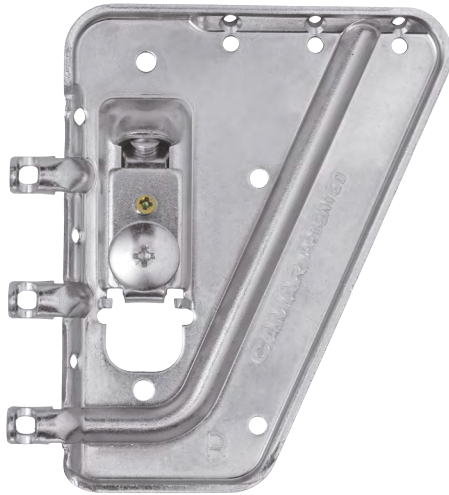


 50  1500  100






1  **2** 





3a 


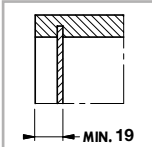


3b 


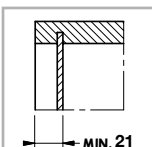


  Screw the golden bolt in to its limit point.
 Avvitare fino a fine corsa.


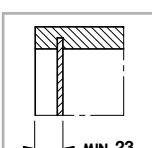


3c 

  After assembly, verify that the anti-drop system has been activated.
 Verificare dopo il montaggio l'avvenuta attivazione del sistema antisgancio.

9  **BRACKET**  **PLATE**  **897 AS Z1 12 86**  696
BP
16mm

9   **810 B4**  **45 12**  643
MIN. 19

9   **810 B2**  **45 12**  643
MIN. 21

9   **810 P0**  **45 12**  644
MIN. 23